



READ THIS MANUAL
PLEASE KEEP FOR PERMANENT REFERENCE
Part No. 115-1 , Rev C 2008

This manual covers the servicing and general maintenance requirements for Aquafine Ultraviolet Water Treatment equipment.

DISINFECTION • TOC REDUCTION • OZONE DESTRUCTION • CHLORINE/CHLORAMINE DESTRUCTION



CSL Series

Installation & Operation Manual


⚠ CAUTION

It is imperative that those responsible for the installation of this equipment, as well as operating personnel, read this manual and carefully follow all instructions and guidelines. EQUIPMENT OPERATORS AND INSTALLERS MUST COMPLY WITH OPERATIONAL SAFETY REQUIREMENTS.

Table of Contents



Refer to this nameplate decal on your unit when ordering parts or service.

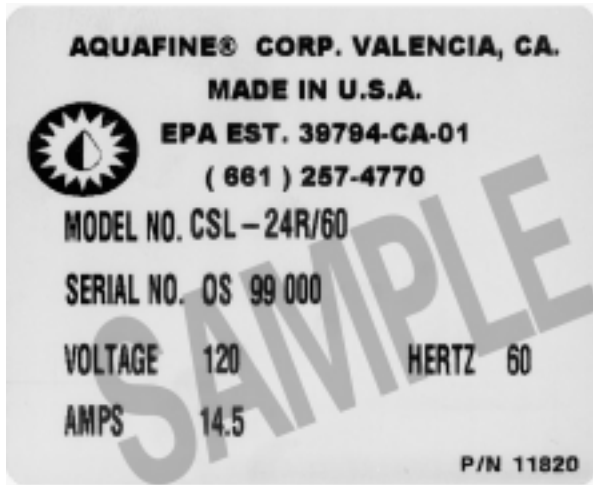

Installation and Operational Safety	3
Description of Equipment	
CSL Series	4
Treatment Chamber	4
Warranty Information	4-5
Unit Installation	
Where to Install the Unit	6
How to Protect Your Unit	6
Operating Pressure	6
Heat Sanitization Information	6
Removing the Plastic Dowel(s)	6
Intermittent Operating Requirements	7
Special Requirements for Ultrapure Water	7
Wiring the Unit	7
Installing the Quartz Sleeves	
SE, DE and HT units	8-9
USD-CSL Series units only	10
Installing the UV Lamps	
Single-Ended (SE) Lamp Design	11
Double-Ended (DE) Lamp Design	12
High Temperature (HT) Unit Design	13
USD-CSL Series units only	14
Powering Up the Ultraviolet (UV) Unit	15
Monitoring Devices	
UV Lamp Operational Display Panel	16
Running Time Meter	16
S-254 UV Optical Sensor	17
Setting The UV Monitor	17
Alarm Contacts	17
Sensor Alarm	17
4-20 mA Sensor Signal Option	18
Temperature Safety Control Option	18
Lamp Out Alert Indicator Option	18
Troubleshooting	19
Maintenance Requirements	20
Cleaning the Unit	20
LED Display Panel	20
UV Lamp Replacement	20
Quartz Sleeve Cleaning & Replacement	20
Cleaning the Sensor Probe Window	20
Measuring Performance, Sampling	21
Ballast Replacement	22
Parts List	23-26
Electrical Diagram, General Outline Drawing, General Assembly Drawing and Warranty Registration Card	Back Pocket

Aquafine®



Installation *and Operational Safety*

safety requirements for UV equipment

The following safety requirements relate directly to operator safety. Please review with all appropriate personnel to ensure continuous compliance.

These safety requirements are **MANDATORY**.

Failure to carefully follow these requirements can cause injury to the operator and damage the UV unit.



This “Safety Issue” icon marks all items relating to safety issues. Please read and adhere to these comments carefully.

1. Release the pressure in the UV treatment chamber before attempting to remove the protective covers and sealing items.
2. Disconnect all power to the UV unit before servicing. The unit operates on high voltage and should only be serviced by qualified personnel.
3. Do not look at the lighted blue ultraviolet lamps. Do not operate the ultraviolet lamps outside of the UV treatment chamber. Exposure can severely burn and damage eyes and skin.
4. Supply the unit with the correct voltage and frequency as indicated on the nameplate decal, ensuring the unit is wired in accordance with local electrical codes.
5. Properly ground the unit. Failure to comply may result in severe or fatal electrical shock.
6. Install the unit away from undue vibration that can damage the electrical components and UV lamps.
7. Ensure all water connections (flanges and compression nuts) are tightly sealed before applying pressure to the UV unit. **Do not stand in a direct line with the end plate when inspecting for water leaks; observe from the front or back.**
8. Do not allow the unit to overheat by operating without water flow. Normal operating temperature for standard UV units is 50° to 100°F (10°-38°C). For high-temperature units, normal operating temperature is 50° to 150°F (10°-66°C). If your application requires temperatures that are not within the standard temperature range for your unit, please contact Aquafine customer service for assistance.
9. Do not allow the inlet water temperature to exceed 100°F (38°C) for standard applications or 150°F (66°C) for high-temperature applications. For operating temperatures exceeding the parameters mentioned above, please contact the Aquafine customer service department.
10. Do not allow the water temperature to drop below 50°F (10°C) for standard applications. For operating temperatures below 50°F, please contact the Aquafine customer service department.
11. Do not allow the flow rate to exceed the maximum rated capacity.
12. **DO NOT ELECTRICALLY CYCLE THE UV UNIT MORE THAN THREE (3) ON/OFF CYCLES IN A 24-HOUR PERIOD.**
13. Before start up, flush the UV unit and discharge piping to rinse out any debris left from installation.

**DO NOT LOOK
AT UV LIGHT**



Description of Equipment

CSL series

The models in this series combine the electrical enclosure and the treatment chamber in one integral unit. The CSL Series is the appropriate choice for many indoor treatment applications because it offers a compact footprint and easy installation.

The electrical housing sits underneath the treatment chamber. It contains the lamp ballasts, electrical components, and all instrumentation. At the back is a cable entry hole for your incoming power. The unit is protected by fuses in the back panel. There is a removable access panel in the front to allow for complete servicing.

treatment chamber

The UV treatment chamber is comprised of one or more multi-lamp cylinders. On either end are gasketed end plates which contain the stainless steel nipples and the lamp socket retainer assemblies.

Inside each cylinder is a helical baffle that prevents laminar flow and maximizes the unit's performance. The quartz sleeves fit inside the UV treatment chamber through the holes in the helical baffle. The lamps fit inside the quartz sleeves. The lamp sockets connect to the lamps, providing a waterproof seal and a vibration-proof grip. The socket covers on either end of the chamber protect the lamp sockets and lamp socket assemblies.

Warranty Information

To maintain your UV units warranty, please complete and return the Warranty Registration Card located in the back pocket of this manual.

The following installation and operating conditions are considered hazardous or damaging to the equipment and can compromise the ability of the Aquafine unit to perform as intended.

ANY OF THE FOLLOWING CONDITIONS WILL VOID THE EQUIPMENT WARRANTY.

1. Failure to connect proper electrical service to unit.
2. Failure to properly ground the unit.
3. Failure to eliminate excessive vibration, piping movement, or water hammer.
4. Failure to exercise caution in the handling of the sensitive and delicate components (such as lamps, quartz sleeves, electronic boards, etc.) during installation and/or maintenance procedures.
5. Failure to avoid excessive stops and starts. Not more than three (3) on/off cycles per 24 hours of operation.
6. Operation of visibly damaged equipment.
7. Failure to avoid undue overhead piping stress which can result in structural damage to the UV unit. Limit the load to 50 lbs (22.7kg) per flange.
8. Use of components other than those provided or authorized by Aquafine.
9. Failure to correct overhead piping connection leaks or compression nut seal leaks which result in damage to the electrical components.
10. Operating the unit without water flow.



Aquafine Certificate of Equipment Warranty

The following terms and conditions will govern the equipment warranty provided by Aquafine Corporation Inc. to the Owner/Operator:

Aquafine Corporation ("Aquafine") warrants to the Owner/Operator noted above (the "Customer") that if within 12 months from equipment start-up or 18 months from the date of delivery, whichever comes first, equipment manufactured by Aquafine (the "Equipment") will be free from defects in material and workmanship and will function in accordance with the specifications agreed to by Aquafine for the Equipment.

This warranty shall not apply to any failure or defect which results from the Equipment not being operated and maintained in strict accordance with instructions specified in the Operation and Maintenance manual or which results from mishandling, misuse, neglect, improper storage, improper operation of the Equipment with other equipment furnished by the Customer or other third parties or defects in designs or specifications furnished by or on behalf of the Customer by a person other than Aquafine. In addition, this warranty shall not apply to Equipment that has been altered or repaired after start-up by anyone except: (a) authorized representatives of Aquafine, or (b) Customer acting under specific instructions from Aquafine.

Customer must notify Aquafine in writing within 5 days of the date of any Equipment failure. This notification shall include a description of the problem, a copy of the operator's log, a copy of the Customer's maintenance record and any analytical results detailing the problem. If Customer has not maintained the operator's log and maintenance record in the manner directed in the Operation and Maintenance manual, or does not notify Aquafine of the problem as specified above, this warranty may, in Aquafine's discretion, be invalid.

Customer will fully cooperate with Aquafine, in the manner requested by Aquafine, in attempting to diagnose and resolve the problem by way of telephone support. If the problem can be diagnosed by telephone support and a replacement part is required Aquafine will either, at Aquafine's expense, ship a repaired, reworked or new part to the Customer who will install such part as directed by Aquafine or will direct Customer to acquire, at Aquafine's expense, such part from a third party and then install such part as directed by Aquafine.

In the event that Aquafine determines that the problem cannot be resolved by way of telephone support and/or shipment by Aquafine, or acquisition by the Customer, of a replacement part for installation by the Customer, Aquafine will send one or more persons to make an onsite inspection of the problem. If an onsite visit is made, Aquafine personnel will evaluate the problem and repair or replace any Equipment determined to be in breach of this warranty. If the problem is not attributable to a breach of this warranty, Aquafine reserves the right to invoice the Customer for this service.

Equipment components manufactured by third parties but furnished to Customer by Aquafine are warranted by the original manufacturer, only to the extent of the original manufacturer's warranty, and are not covered by the above warranty.

This warranty is the exclusive remedy for all claims based on a failure of or defects in the Equipment, whether the claim is based on contract (including fundamental breach), tort (including negligence), strict liability or otherwise. This warranty is in lieu of all other warranties whether written, oral, implied or statutory. Without limitation, no warranty of merchantability or fitness for a particular purpose shall apply to the Equipment.

Aquafine does not assume any liability for personal injury or property damage caused by use or misuse of the Equipment. Aquafine shall not in any event be liable for special, incidental, indirect or consequential damages including, without limitation, lost profits, lost business opportunities, lost revenue or loss or depreciation of goodwill, even if it has been advised of the possibility thereof. Aquafine's liability shall, in all instances, be limited to repair or replacement of Equipment in breach of this warranty and shall not exceed the cost of such repair or replacement. This liability with respect to repair or replacement will terminate upon the expiration date of this warranty.

In addition to the foregoing, in no event shall Aquafine's liability relating to the Equipment, or the agreement between Aquafine and the Customer relating to the Equipment, exceed that portion of the purchase price for the Equipment which is actually paid to Aquafine.

For more information, please contact Aquafine Corporation.
Email: www.sales@aquafineuv.com or go to www.aquafineuv.com
29010 Avenue Paine, Valencia, California USA 91355

Unit Installation

where to install the unit

Install the UV treatment unit in a horizontal position in a sheltered area with ample ventilation. Ambient temperatures surrounding the unit should be between 50°F (10°C) and 110°F (43°C). For operation below 50°F or should your requirements differ, contact the Aquafine for assistance.

As an ultraviolet UV treatment unit does not introduce any chemical residue within the water, it is desirable to install the unit as close as possible to the point-of-use in order to avoid potential recontamination by discharge pipes, fittings, etc. The base of the UV treatment unit should be mounted on suitable support to avoid undue strain on the unit or your related pipes and fittings.

Allow sufficient service access clearance. In making your plumbing connections, provide unions, valves, bypass and drain.



Depending on the size of the lamp being used, please allow at least 36" (92 cm) of clearance for 30" units or 72" (182 cm) of clearance for 60" units on the lamp changing end of the unit.

how to protect your unit

The location should be free from undue vibration which could be caused by proximity to heavy equipment, erratic or improper pumps. Excessive vibration will damage internal electrical components and cause premature failure of the UV lamps.

Limit overhead piping load to 50 lbs (22.7 kg) per flange. If your piping system is subject to impulse pressure resulting in a "water hammer" condition, a surge tank or other means must be provided to remove this condition, otherwise the extreme momentary



A parts check list was included when this unit was shipped. Please refer to this list and note that some parts are small and can be easily overlooked when discarding packaging.

pressure may rupture and fracture the quartz sleeves.

operating pressure

Standard units are rated for a maximum operating pressure of 120 psig (8.24 bar).

If your unit has the High Pressure Modification option (model number suffix "HP") operating pressure may increase to 150 psig (10.34 bar).

heat sanitization

For heat sanitization (temperatures exceeding 170°F (77°C) up to a maximum of 194°F (90°C)), it is recommended that stainless steel compression nuts be used in place of CPVC compression nuts. During hot water sanitization the S-254 probe must be removed. (Adaptor available for maintaining Hydrostatic seal during sanitization.) The selection of the elastomers should be considered.

remove the plastic dowel(s)

A plastic dowel is placed inside the UV treatment chamber to secure the baffle during shipping. The 30" units have one dowel on the left side only, and the 60" units have two dowels -- one on each side.

First, remove the compression nut in the twelve o'clock position. Then remove and discard the plastic dowel. Replace the compression nut. Repeat on the other side if necessary. You can then proceed with the installation



of the quartz sleeves.

intermittent operation

Never operate the unit without water flow. Permanent damage is caused to the UV lamps, electronic ballasts and related components without water flow.

Operating the ultraviolet unit without water flow through the chamber automatically voids the warranty.

If operated without water flow, the fluid within the ultraviolet chamber will become hot causing the UV lamps to lose effectiveness. The heat can permanently damage the ultraviolet lamps, UV sensor, the lamp ballast components and related instrumentation.

Should the unit be used for specific batch flow operations, it can be turned “on” and “off” manually. Make sure the unit is allowed to warm up for at least one minute before use, and make sure the unit is turned “Off” after each session. Do not exceed 3 on/off cycles per 24 hour operation.

If you need help to determine the best method of operating your UV treatment unit under intermittent conditions, contact your local representative or the factory.

An optional Temperature Safety Control Device is available to prevent the overheat problems described above.

special piping requirements for users of ultrapure water

Ultrapure water users have reported that over time, exposure to ultraviolet light may photochemically degrade nonmetallic piping materials, including most or all fluoro-polymers, resulting in material breakdown and/or structural failure.

Should your water application and piping material be so classified, we recommend you install “UV light traps” to isolate any such susceptible material from direct exposure to the ultraviolet light. Install the UV light trap to the inlet/outlet of the UV treatment chamber prior to the connection of any nonmetallic materials. UV light traps protect nonmetallic piping. Should you require any additional assistance, please contact your local Aquafine

representative or the factory directly.

wiring the unit

Bring your wiring to the cable entry hole in the back of the cabinet, making sure your electrical service matches the electrical data as shown on the electrical name plate decal. Locate an “on/off” switch near the UV treatment unit so the current may be conveniently turned off for servicing. Please see the wiring diagram in the back pocket of this manual.

GROUNDING

IT IS IMPERATIVE THAT THE UNIT BE PROPERLY GROUNDED FOR SAFE AND PROPER OPERATION.


Failure to properly ground the UV treatment unit automatically voids all equipment warranty.

UV performance is line voltage sensitive. Line voltage should be $\pm 5\%$ of rating shown on the electrical nameplate decal. Voltage outside these limits can reduce the performance of the UV unit.


Installing *the Quartz Sleeves*



Remove socket covers

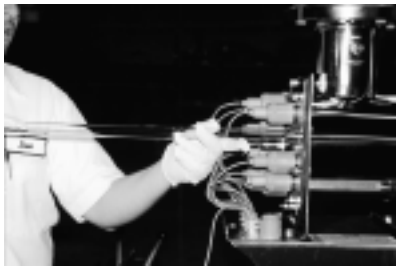

Place end of quartz sleeve into threaded nipple

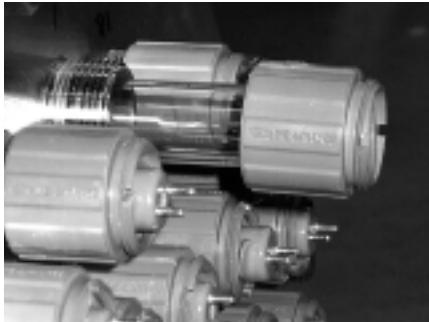

Compression nut assembled on the quartz sleeve



Rotate compression nut clockwise onto the threaded stainless nipped end plate with compression nut tool



Over tightening can break the quartz sleeves or create leaks.

The procedures on this and the following page apply to Double-Ended (DE), Single-Ended (SE) and High Temperature (HT) CSL units.

quartz sleeve installation procedures for new equipment

The quartz sleeves designed for this unit are open on both ends. For first time unit installations, follow these quartz sleeve installation procedures:

1. Turn off all power to the unit.
2. Wear clean cotton gloves to prevent contamination of the quartz sleeves.
3. Carefully remove each quartz sleeve from the factory packaging. Handle these with care as they are fragile.
4. Visually inspect all quartz sleeves for cracks or other damage. Do not install damaged quartz sleeves.
5. Remove the socket covers on the ends of the treatment chamber.
6. For High-Temperature units, remove the alignment plate from both ends of the unit.
7. Remove all compression nuts and any packaging material from the end plate (if installed).
8. Place the end of the quartz sleeve into the threaded nipple and slowly push the sleeve into the chamber through to the second end plate. Repeat for all quartz sleeves.
9. Install the compression nut and o-ring by placing the o-ring into the internal relief of the compression nut below the threaded area. The o-ring should fit into the compression nut.
10. Place the compression nut and o-ring onto the end of the quartz sleeve until the end of the quartz sleeve touches the end of the compression nut. Some pushing and twisting may be required. Deionized water may be used as a lubricant.
11. Tighten the compression nut approximately 1/2 turn after the threaded nipple and o-ring make contact.
12. Repeat this procedure for the second endplate.
13. Slowly pressurize the system and fill the chamber with water to check for leaks.
14. If there are leaks in any compression nut assembly, depressurize the system and use the compression nut tool to slightly tighten the leaking compression nut assembly.
15. Retest until a leak-free installation is verified.
16. You are now ready to install the UV lamps.




quartz replacement procedures for existing equipment

The quartz sleeves designed for this unit are open on both ends. For existing equipment, replace the quartz sleeves as follows:

1. Turn off all power to the unit.
2. Depressurize the system and drain the UV unit.
3. Remove the socket covers on the ends of the treatment chamber.
4. For High-Temperature units, remove the alignment plate from both ends of the unit.
5. Remove the existing lamp sockets and compression nuts from the endplate.
6. Wear clean cotton gloves to prevent contamination of the quartz sleeves and UV lamps.
7. Remove the existing UV lamps.
8. Remove the existing quartz sleeves.
9. Carefully remove each new quartz sleeve from the factory packaging. Handle these with care as they are fragile.
10. Visually inspect all quartz sleeves for cracks or other damage. Do not install damaged quartz sleeves.
11. Place the end of the quartz sleeve into the threaded nipple and slowly push the sleeve into the chamber through to the second endplate. Repeat for all quartz sleeves.
12. Install the compression nut and o-ring by placing the o-ring into the internal relief of the compression nut below the threaded area. The o-ring should fit into the compression nut.
13. Place the compression nut and o-ring onto the end of the quartz sleeve until the end of the quartz sleeve touches the end of the compression nut. Some pushing and twisting may be required. Deionized water may be used as a lubricant.
14. Tighten the compression nut approximately 1/2 turn after the threaded nipple and o-ring make contact.
15. Repeat this procedure for the second endplate.
16. Slowly repressurize the system and fill the treatment chamber with water to check for leaks.
17. If there are leaks in any compression nut assembly, depressurize the system and use the compression nut tool to slightly tighten the leaking compression nut assembly.
18. Retest until a leak-free installation is verified.
19. You are now ready to install the UV lamps.



Remove socket covers

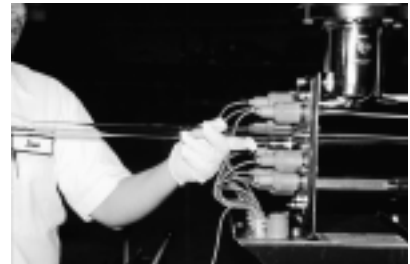

Place end of quartz sleeve into threaded nipple



Compression nut assembled on the quartz sleeve



Rotate compression nut clockwise onto the threaded stainless nipped end plate with compression nut tool



Over tightening can break the quartz sleeves or create leaks.



Installing *the Quartz Sleeves*

USD-CSL Series units only

The quartz sleeves for this unit utilize a design that is open on one end and closed on the other end. The closed end of the tube is inserted into the threaded nipple and then through the baffle system in the chamber. Within the baffle, Teflon bushings provide additional support to the quartz sleeves.

QUARTZ SLEEVE INSTALLATION PROCEDURES

For first time unit installations, follow these quartz sleeve installation procedures:


1. Turn off all power to the unit.
2. Wear clean cotton gloves to prevent contamination of the quartz sleeves.
3. Carefully remove each quartz sleeve from the factory packaging. Handle these with care as they are fragile.
4. Visually inspect all quartz sleeves for cracks or other damage. Do not install damaged quartz sleeves.
5. Remove the socket covers on the ends of the treatment chamber.
6. Remove all compression nuts and any packaging material from the end plate (if installed).
7. Place the closed end of the quartz sleeve into the threaded nipple and slowly push the sleeve into the chamber. Some resistance may be felt from the Teflon bushing.
8. Install the compression nut and o-ring by placing the o-ring into the internal relief of the compression nut below the threaded area. The o-ring should fit into the compression nut.
9. Place the compression nut and o-ring onto the end of the quartz sleeve until the end of the quartz sleeve touches the end of the compression nut and hand tighten until snug. Deionized water may be used as a lubricant.
10. Tighten the compression nut approximately 1/2 turn after the threaded nipple and o-ring make contact.
11. Repeat this procedure for all quartz sleeves.
12. Slowly pressurize the system and fill the chamber with water to check for leaks.
13. When applicable, bleed the air from the UV treatment chamber by opening the plug on top of the chamber. Replace with a suitable valve.
14. If there are leaks in any compression nut assembly, depressurize the system and use the compression nut tool to slightly tighten the leaking compression nut assembly.
15. Retest until a leak-free installation is verified.
16. You are now ready to install the UV lamps.




Over tightening can break the quartz sleeves or create leaks.




Stainless socket & lamp end cover design

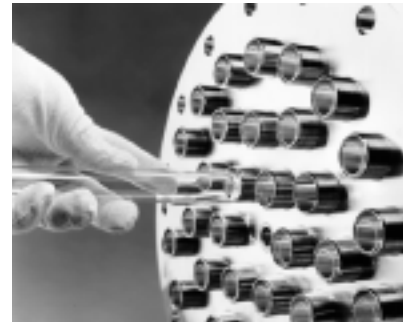

Quartz sleeve installation

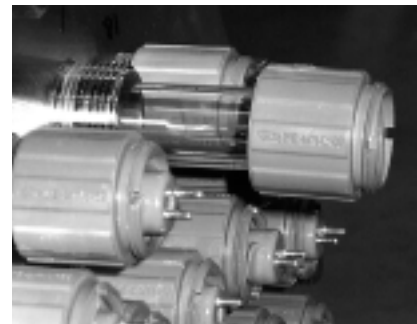


Compression nut assembled on the quartz sleeve

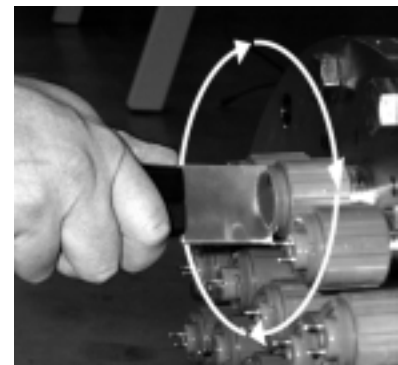

Compression Nut Tool - Rotate clockwise onto the threaded stainless nipped end plate with compression nut tool



Installing *the Ultraviolet (UV) Lamps*

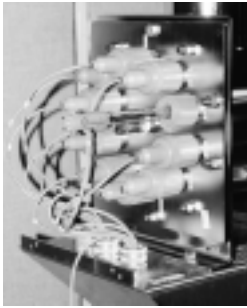

Insert the lamp into quartz sleeve



Lamp locked into compression nut



Lamp socket ID number on end plate



Firmly connect the lamp pins with the connector



Screw the lamp socket cap on

single-ended lamp design

for units manufactured after 1/1/99

Once it has been verified that there are no leaks in the system, the UV lamps are ready for installation.

1. Remove all power to the UV unit.
2. Depressurize the system.
3. Wear clean cotton gloves to prevent contamination of the UV lamps.
4. Carefully remove each UV lamp from the factory packaging. Handle these with care as they are fragile.
5. Visually inspect all lamps for cracks or damage. Do not install damaged lamps.
6. Using both hands, slowly insert the lamp into the quartz sleeve by pushing one end of the lamp with one hand, while continuing to support the lamp *in a level, horizontal position* with the other hand. This is very important. If not installed properly, lamp or quartz breakage will occur.
7. Twist the lamp into the locking mechanism of the compression nut. This ensures the lamp is secure within the chamber.
8. Each lamp socket is identified with a number that corresponds to each lamp position marked on the end plate. Match the lamp socket and connect to the appropriate lamp.
9. The two pins in the lamp must be pushed down to fit securely into the pins with the connector.
10. Rotate and screw the lamp socket cap into place. Only hand tightening is required. *Do not overtighten!*
11. Repeat the procedure above for the second endplate for the non-pin lamp ends. Instead of securing the lamp socket lead assembly to this end of the assembly you will twist on and firmly secure the fixed Compression Nut Cap to the compression nut assembled on the quartz sleeve.

CAUTION! Prior to energizing the ballasts and lamps, ensure there is no water leaking into the quartz sleeves and compression nut cavities by properly installing these components. Even a small leak can flood a quartz sleeve and compression nut cavity.




During operation, high voltage is present at the lamp pins and receptacles of the lamp connectors. Prolonged flooding of a quartz sleeve and compression nut cavity can cause premature failure of the lamp due to repeated arcing, overheating of the lamp connector cable, and may result in a meltdown of the cable insulation.




double-ended lamp design

for units manufactured prior to 1/1/99

1. Remove all power to the UV unit.
2. Depressurize the system.
3. Wear clean cotton gloves to prevent contamination of the UV lamps.
4. Insert one UV lamp into each open quartz sleeve and push it about 2"-3" (51-76mm) out beyond the left compression nut, so as to be able to hold the lamp with your right hand.
5. Unscrew and pull back the retainer cap from the rubber lamp socket.
6. Insert the lamp base into the rubber socket. Push until you feel a firm "bottomed out" connection.
7. Carefully slide the rubber boot portion of the lamp socket over the end of the lamp. **CAUTION: DO NOT INSERT UV LAMPS WITH OPPOSING RETAINER CAP IN PLACE. Verify no portion of the rubber boot has folded under during this process.**
8. Screw the slotted retainer cap clockwise onto the compression nut, making sure the number on the socket lead wire and the end plate correspond.
9. Connect the right side rubber lamp sockets and spring-loaded lamp socket retainer assemblies onto each lamp. Pay special attention to match the numbers on the retainer assemblies with the numbers beside each steel nipple on the end plate.
10. Carefully pull out each rubber lamp socket from each spring-loaded socket retainer assembly.
11. With one hand, push the rubber socket boot onto the end of each ultraviolet lamp. When properly attached, a slight "snap" can be felt, which indicates a proper connection.
12. Carefully slide each lamp socket retainer assembly up and over the rubber lamp socket boot, until the retainer assembly reaches the male-threaded portion of the compression nut.
13. Then, turn clockwise until the socket retainer cap bottoms out against the compression nut. Avoid overtightening.

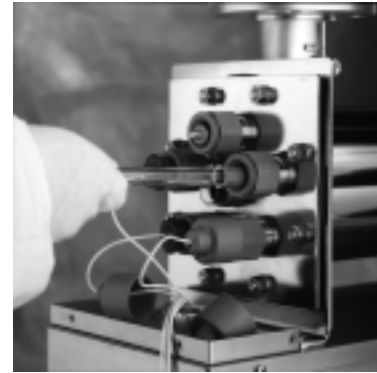

Insert lamp base into the quartz sleeves.

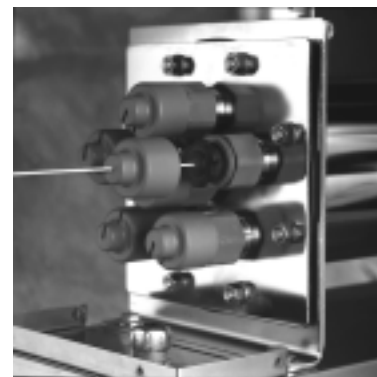

Screw the slotted retainer cap onto the compression nut.



Lamp socket ID number on end plate

CAUTION! Prior to energizing the ballasts and lamps, ensure there is no water leaking into the quartz sleeves and compression nut cavities by properly installing these components. Even a small leak can flood a quartz sleeve and compression nut cavity.

During operation, high voltage is present at the lamp pins and receptacles of the lamp connectors. Prolonged flooding of a quartz sleeve and compression nut cavity can cause premature failure of the lamp due to repeated arcing, overheating of the lamp connector cable, and may result in a meltdown of the cable insulation.




more **Installing** the Ultraviolet (UV) Lamps

high temperature (HT) units

Once it has been verified that there are no leaks in the system, the UV lamps are ready for installation.

1. Remove all power to the UV unit.
2. Depressurize the system.
3. Wear clean cotton gloves to prevent contamination of the lamps.
4. Carefully remove each UV lamp from the factory packaging. Handle these with care as they are fragile.
5. Visually inspect all lamps for cracks or damage. Do not install damaged lamps.
6. Using both hands, slowly insert the lamp into the quartz sleeve by pushing one end of the lamp with one hand, while continuing to support the lamp **in a level, horizontal position** with the other hand. This is very important. If not installed properly, lamp or quartz breakage will occur.
7. Place the PVC alignment plate on one end and secure in place with locknuts.
8. Guide each lamp into the lamp socket, making sure you have a firm and complete connection.
9. Place the PVC alignment plate on the opposite end of the disinfection chamber and align, making sure you have a firm connection of all lamps and lamp sockets, then secure the PVC alignment plate into position with the locknuts. Should you find the UV lamp failing to operate, the cause will generally be attributed to an improper lamp socket connection.
10. Place each socket cover near the ends of the disinfection unit and connect the two fan wires with the two power wires supplied from the unit base. Secure the socket cover to the disinfection cabinet with the screws that are provided.

CAUTION! Do not look at lighted blue ultraviolet lamps. Do not operate ultraviolet lamps outside the treatment chamber. Severe irritation to the eyes and skin will result.

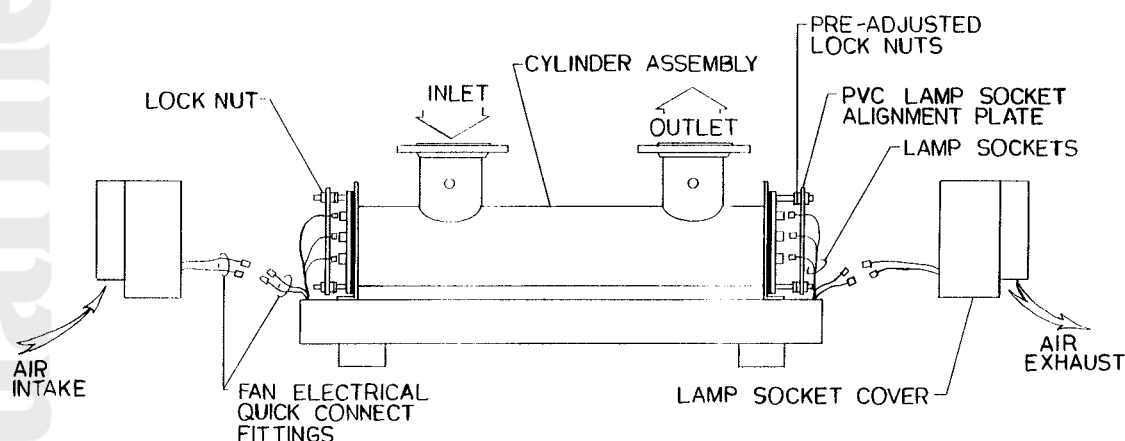

HIGH TEMPERATURE MODIFICATION

Aquafine High-Temperature UV Unit

Installing *the Ultraviolet (UV) Lamps*

USD-CSL Series units only

Once it has been verified that there are no leaks in the system, the UV lamps are ready for installation.

1. Remove all power to the UV unit.
2. Depressurize the system.
3. Wear clean cotton gloves to prevent contamination of the UV lamps.
4. Carefully remove each UV lamp from the factory packaging. Handle these with care as they are fragile.
5. Visually inspect all lamps for cracks or damage. Do not install damaged lamps.
6. Using both hands, slowly insert the lamp into the quartz sleeve by pushing it with one hand while guiding it with the other ***in a level, horizontal position***. This is very important. If not installed properly, lamp or quartz breakage will occur.
7. Twist the lamp into the locking mechanism of the compression nut. This ensures the lamp is secure within the chamber.
8. Each lamp socket is identified with a number that corresponds to each lamp position marked on the end plate. Match the lamp socket and connect to the appropriate lamp.
9. The lamp pins must be pushed down to fit securely in the lamp socket connector.
10. Rotate and screw the lamp socket cap into place. Only hand tightening is required. ***Do not overtighten!***

CAUTION! Prior to energizing the ballasts and lamps, ensure there is no water leaking into the quartz sleeves and compression nut cavities by properly installing these components. Even a small leak can flood a quartz sleeve and compression nut cavity.

During operation, high voltage is present at the lamp pins and receptacles of the lamp connectors. Prolonged flooding of a quartz sleeve and compression nut cavity can cause premature failure of the lamp due to repeated arcing, overheating of the lamp connector cable, and may result in a meltdown of the cable insulation.



Insert the lamp in a level, horizontal position.



UV Lamp securely inside locking mechanism



Lamp socket ID number on end plate



Secure lamp socket connector to lamp



Screw the lamp socket cap into place



Powering Up *the Ultraviolet (UV) Unit*

prior to turning on the UV unit, the following must be verified:

- With water flowing through the system, ensure that there are no system leaks and no piping connection leaks.
 - All earth ground connections are properly made.
 - All lamp connections are properly made.
 - The socket covers are secured to both ends of the UV treatment unit.
1. Verify that all incoming power conductors, including the ground conductor, are properly terminated.
 2. Turn on the electrical power to the UV unit.
 3. Observe the UV Lamp Operational Display panel. All yellow lights produce a steady glow after 3 minutes time. Operate 10 more minutes and recheck. The UV unit is now ready for operation.

Turn the power off until actual operational start-up begins.

CAUTION! Rapid successive cycling of the power to the ballasts can cause premature failure of the system components.



Aquafine®



Monitoring *Devices*



UV lamp operational display panel

UV lamp operational display panel

To verify that all the UV lamps are operating properly, your UV treatment unit has been provided with a UV Lamp Operational Display Panel. The panel consists of as many LED indicators as there are ultraviolet lamps. Each LED indicator is electrically connected to the lamp circuitry of a specific UV lamp. The LED indicators are intended to operate “on” when the UV lamps are also turned “on”.

Should any UV lamp fail to operate electrically, the corresponding LED will automatically turn “off”.

Each UV lamp is numbered at the end of the UV treatment chamber, and the corresponding LED light carries the same number on the display panel; thus, if one or more LED lights fail to operate, you can easily determine which specific lamp requires attention.

We recommend you monitor the LED Panel daily to ensure proper performance.



Running time meter

running time meter

Your ultraviolet treatment unit has been furnished with a Running Time Meter, located on the front instrument panel. This non-resettable running time meter will log up to 99,999 hours. It is intended to remind you of the number of operating hours on the equipment, as certain maintenance functions need to be performed at certain time intervals.

A maintenance log is attached to the unit for your use. It should be kept current. This provides an immediate maintenance reference: when it was performed and when the next service is due. Additional service logs are available from Aquafine, and are intended to be placed on top of the existing service logs.

model S-254 UV optical sensor option

The optional S-254 UV optical sensor measures the relative output of ultraviolet light within the UV treatment chamber. Degradation of the UV lamps, fouling of the quartz sleeves, water temperature fluctuation and increased turbidity of the water will all affect the sensor reading.

The UV meter assembly and instrumentation setpoint potentiometers are located on the front of the electrical enclosure. The peripheral alarm contacts are accessible from the back side of the meter. A shielded signal cable connects the sensor meter assembly to the sensor probe. The sensor probe is located in the sensor port fitting on the top of the UV treatment chamber in Double-Ended, High Temperature (HT) units and in the endplate in Single-Ended units.

All S-254 UV optical sensors are tested and preset at the factory in free air. **Setpoint adjustments are required at installation and after each subsequent lamp changeout cycle.**

SETTING THE UV METER

1. Gradually start the normal flow rate.
2. Bring the unit up to normal operating pressure.
3. Turn the UV lamps on for a minimum of 15 minutes.
4. Adjust the sensitivity pot to 100%.
5. Adjust the sensitivity pot to 50%.
6. Adjust the alarm pot until the red LED barely comes on.
7. Set the sensitivity pot back to 100%.
8. Turn the sensitivity pot to 50%; the red LED should come on.
9. Turn the sensitivity pot back to 100%.



S-254 optical sensor

ALARM CONTACTS

Normally Closed and Normally Open alarm contacts are also provided for use with user-supplied peripheral equipment, such as remote alarms or solenoid valves. Dry relay contacts are rated as follows: 0.52 AMP 120 VAC., 0.25 AMP 240 VAC

If your application requires higher contact ratings, use a slave relay. Connection of peripheral equipment is the responsibility of the user. See the wiring schematic in back pocket of this manual

SENSOR ALARM

The S-254 UV optical sensor provides information about the relative amount of UV passing through the water. The reading is affected by quartz sleeve fouling and/or the germicidal lamp efficiency. The UV sensor is sensitive to, and reflects changes in, UV transmission when a substantial change occurs in the normal operating flow rate, temperature, operating pressure, or quality of the fluid flowing in the system.

When the UV intensity falls below the minimum standard due to any of the above conditions, the sensor alarm light (red LED) will come “on” and corrective action must be taken to optimize the performance of the UV treatment unit.

1. Examine your system for any significant changes in normal operating conditions.
2. Check if all UV lamps are electrically operating and/or need replacement. Verify the quartz sleeves are clean.

If quartz sleeve fouling has caused the optical sensor alarm to activate, the quartz sleeves must be cleaned. At the same time, you must clean the sensor probe quartz window. Please find this information in the maintenance section of this manual.

Re-calibration must be performed after the first 100 hours of operation on new UV lamps, both at the time of installation and each time the UV lamps are replaced.



4-20 mA sensor signal option

This option works with the optional S-254 optical sensor. It generates a 4-20 mA output signal based upon the relative UV intensity which may be monitored at a remote control panel or control PC. The customer is responsible for providing an appropriate 4-20 mA display instrument and connecting it.

temperature safety control option*

The Temperature Safety Control consists of a heat-sensing probe. This device protects against inadvertent overheating inside the UV chamber, which can damage the UV lamps and the ballast/LED Display Panel circuitry.

The Temperature Safety Control senses raised water temperature and assumes the UV lamps are operating “on” with no water flow.

STANDARD UNITS

The device automatically turns the UV lamps off when the water temperature reaches 120° F (49°C) and automatically turns the UV lamps back on when the temperature falls to 100° F (38°C).

HIGH TEMPERATURE (HT) UNITS

The device automatically turns the UV lamps “off” when the water temperature reaches 170°F (77°C) and automatically turns the UV lamps back “on” when the temperature falls to 150°F (66°C).

This temperature spread prevents excessive stop/starts during no flow conditions, and it protects the UV lamps and the electrical components from overheating damage.

The temperature probe is located in the end plate. No operator intervention is required other than periodic visual verification that the UV lamps (LED Display Panel) are properly operating during normal water flow conditions.

* This feature is standard on all High Efficiency (HE) units.

lamp out alert indicator option

Lamp Out Alert is an optional accessory package that activates a relay when a UV lamp fails to operate. A visual inspection of the LED UV Lamp Display Panel will indicate which lamp has failed. Dry contacts are provided for customer connection. The dry contacts are rated at 3.0 Amps maximum @ 120 volts.

Wire color codes:

Green = Normally Closed

White = Common

Yellow = Normally Open



It is essential that all non-operational lamps be changed immediately to maintain system efficiency.

Troubleshooting

using the LED display

If an LED bulb does not light after you replace a UV lamp, you need to verify the electrical output of the ballast connected to that specific UV lamp. This is done by testing the ballast open circuit voltage. This should be done by an electrician or qualified facilities personnel. Follow these recommended procedures:

1. Turn power “off” to the UV unit.
2. Remove the socket cover.
3. Identify the “faulty” UV lamp which corresponds to the number on the LED display.
4. Remove the lamp socket(s) from the “faulty” UV lamp base.
5. Use a voltmeter and set an operating range at >700 VAC.
6. Measure the open circuit voltage:

For Single-Ended (SE) UV lamps:
Connect the voltmeter across the receptacles of the lamp socket.

For Double-Ended (DE) & High Temperature (HT) UV lamps: Connect one end of the voltmeter to one end of the lamp socket and the other end of the voltmeter of the opposite end of the lamp socket.
7. Turn power “on” to the UV unit.
8. Record the reading.
9. Turn power “off”.
10. Listed below please find the open circuit voltages for the various ballasts:

Ballast Type		
120 Volt Electronic	240 Volt Magnetic	240 Volt HE
550-650	575-675	450-660

If the voltage reading is zero or a number above or below the acceptable ranges, this indicates a ballast fault, and the ballast connected to the “faulty” UV lamp must now be replaced.

If the voltage reading is within acceptable ranges but the LED does not light, the LED board has failed and needs to be replaced.

Refer to the Replacement Parts Lists in the back of this manual to identify the proper ballast and/or LED part number.



UV lamp operational display panel

CAUTION! Avoid touching the lamp tip after you remove the lamp socket. This is a shock hazard.



Aquafine®



Maintenance *Requirements*

cleaning the unit

The exterior surfaces of the Aquafine UV unit should be kept clean as part of routine maintenance. Use a soft cloth with soap and water or any commercial stainless steel cleaner. Avoid scratching the Lexan instrument window.

LED status display panel

Monitor the Status Display LED Panel daily. Immediately replace any failed UV lamp.

UV lamp replacement

Replace Standard UV lamps after 8,000 hours of use. Replace High Efficiency (HE) UV lamps after 8,000 hours of use.

THIS IS BASED ON NO MORE THAN (3) ON/OFF POWER CYCLES PER 24 HR. PERIOD.

Please follow the operating requirements outlined in the warranty section of this manual.

Premature lamp failure or lamp life deterioration can be expected if the UV unit is cycled on/off more than three (3) times a day. To replace the lamps, follow the procedures on pages 11-14.

quartz sleeve cleaning & replacement

As water passes through the ultraviolet treatment unit, minerals, debris and other substances in the water will settle and deposit onto the quartz sleeve. This will impair the ability of the ultraviolet rays to penetrate the water.

Recent studies have shown that degradation of the quartz sleeve from continuous exposure to UV reduces the amount of UV radiation transmitted into the water stream. Based on these findings, we recommend the annual replacement of the quartz sleeves in addition to routine cleaning.

cleaning the quartz sleeves

Visually inspect a quartz sleeve thirty days after use to see if any debris or film has settled on the outside. If dirty, follow these procedures:

1. Turn off the water to the unit.

2. Disconnect the electrical circuit.
3. Drain the UV treatment chamber.
4. Wear clean cotton gloves to prevent contamination of the quartz sleeves and UV lamps.
5. Remove the retainer caps and lamp sockets.
6. Remove the ultraviolet lamps from inside the quartz sleeves.
7. Using the appropriate compression nut tool, loosen the compression nuts and carefully remove the quartz sleeves.
8. Wash the quartz sleeves with mild soap and water and rinse with clean, hot water.

Should this be insufficient to clean the quartz sleeves, they should be replaced. To place an order, contact Aquafine or your local representative. To replace the quartz sleeves, follow the procedures on pages 8-10.

cleaning the sensor probe window

1. Shut off the flow and release the pressure.
2. Shut off all power to the UV unit.
3. Remove the coaxial cable by pushing and turning the BNC terminal counterclockwise. The connector will slide off.
4. Twist and pull the probe from the sensor fitting.
5. Use a lint-free cloth with alcohol and very carefully wipe the lens face on the front of the probe. Failure to do so may result in false readings.
6. Replace the probe and the coaxial cable.
7. Turn the power "on" and resume operation. Whenever new lamps have been installed, follow all resetting instructions.

CAUTION! Prior to removing the socket cover to access the lamps and quartz sleeves, you must release all pressure to the UV treatment chamber. Drain the chamber if required. Do not stand in a direct line with the end plate; observe from the front or back of the unit.



more **Maintenance** Requirements

measuring performance

Every UV treatment unit should be tested periodically to verify actual efficiency. Regardless of the intended application or any optional equipment which may have been provided with your UV unit, the most accurate and dependable procedure is to conduct post-UV sample analysis in accordance with standard testing methods.

Periodic sample collection and testing should be scheduled as often as the user deems sufficient to be assured the quality of the Aquafine ultraviolet unit effluent is acceptable.

obtaining proper water samples

Our experience has shown that the vast majority of unsatisfactory post-UV bacteriological samples are directly related to improper sample-taking techniques.

There are a variety of commercial sample collection apparatuses available, and should you choose one, be sure to follow the manufacturer's recommended procedures.

We have provided 1/4" NPT threaded fittings on both the intake and discharge UV chamber flange risers. We recommend you use these fittings to collect "before and after UV" water samples to eliminate the possibility of contamination by nearby piping, fittings, etc.

We recommend you select a valve with a discharge orifice no larger than 1/4" (6 mm).

sampling procedures

The following procedure is recommended for collecting samples for bacteriological analysis when sample valves are installed:

1. Prior to taking the water sample, have on hand an adequate supply of sterile bottles. These should be obtained from a source laboratory and should have been autoclaved and contained within a plastic outer wrapping.

2. The inside diameter of a sample valve must not exceed 1/4" (6 mm) to ensure proper velocity. Prior to taking the sample, it is imperative that the test sample valve be fully opened under full pressure for a full three and one half minutes. Temporary tubing or some other material may be used to direct the water to a container or drain to avoid unnecessary spillage.
3. After the valve has been left fully open for three and one half minutes, reduce the flow to a reasonable stream of water (not less than 50% of full flow). Continue flowing to drain three additional minutes.
4. Remove any temporary tubing used for flow diversion.
5. Open the sterile bottle. Holding the cap in a down position, the operator should then hold his breath while taking the sample so as to avoid atmospheric contamination of the sample. The operator must also not allow his finger to touch the inside of the cap or the neck of the bottle.
6. After the water sample has been taken, the cap should be immediately secured on the sample container.
7. The sample container should be labeled and placed in a plastic wrapping and must be taken to the laboratory for plating as soon as possible. Processing should begin within three hours of sample collection and should comply with accepted standard methods.

The above procedure was developed by a leading national pharmaceutical firm after an 18-month study. It has been found that virtually all removable debris which may accumulate within a sample valve can be mechanically flushed during the procedures detailed above.

We recommend duplicate samples be taken at each test station, during each specific test, to avoid laboratory error and to ensure reasonable repeatability and validity through comparison.



more **Maintenance Requirements**



Ballast connectors

ballast replacement


Ballast replacement is not part of the UV unit's routine maintenance. However, in the event that a ballast needs to be replaced, the following procedure should be followed:

1. Power down the UV unit by turning the unit isolator switch, if installed, to the "OFF" position. If not, ensure that power to the unit is removed by opening the switch or breaker upstream of the UV unit.
2. Locate the old ballast to be replaced. Refer to the electrical diagram, if necessary.
3. Isolate the old ballast from rest of system by disconnecting the ballast connector.
4. Using 5/32 L-shaped hex wrench completely remove the bolt securing the ballast to the sub panel. Put the bolt aside.
5. Remove the old ballast by pulling it towards you. Discard the old or defective ballast.
6. Install the new ballast, securing it with the bolt removed earlier.
7. Tighten the bolt with 5/32 L-shaped hex wrench.
8. Reconnect ballast connector(s).
9. Restore the power to the UV unit by turning the unit isolator switch to the "ON" position or by closing the upstream switch or breaker.

Replacement *Parts List*



Refer to this nameplate decal on your unit when ordering parts or service.

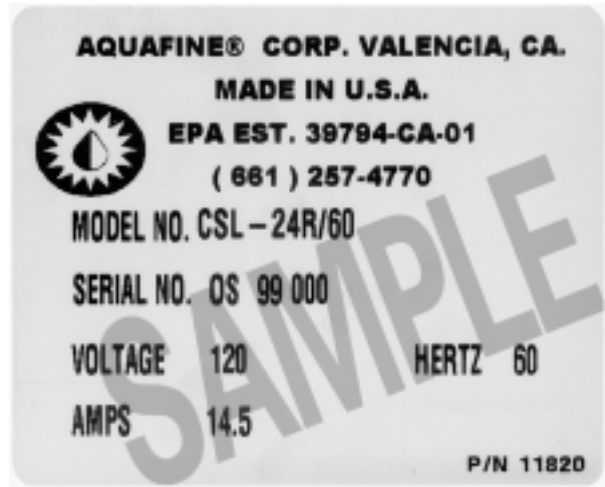

general part description part number

GENERAL

- 1. O-rings - EPDM 4253
- 2. O-rings - Silicone 12967
- 3. O-rings - Viton 40413
- 4. O-rings - Chemraz 16600
- 5. Ballast - 120 Volt 16518
- 6. Ballast - 240 Volt 19721-2
- 7. Fan 120 - Volt 3901
- 8. Fan 240 - Volt 3903
- 9. CSL-4R & 6R Cylinder Gasket
 - Silicone 12131
 - EPDM 3118
 - Goretex 16251
 - Viton 16673
- 10. CSL-8R through CSL-24/60 Cylinder Gasket
 - Silicone 12312
 - EPDM 3244
 - Goretex 16252
 - Viton 16674
- 11. T-120 Temperature Control Switch 18545

Aquafine®



double-ended units cont. part number**DOUBLE-ENDED UNITS**

12. UV Lamps DE Standard 254-Mauve
Disinfection and Ozone Destruction Applications
Size: 30" Length 3084LM
Size: 60" Length 3098LM
13. UV Lamps DE Standard 185-Blue
TOC Reduction Applications
Size: 30" Length 3087
Size: 60" Length 3095
14. UV Lamps DE Validated 254-Green
Disinfection and Ozone Destruction Applications
Size: 30" Length 16676
Size: 60" Length 16677
15. UV Lamps DE Validated 185-Yellow
TOC Reduction Applications
Size: 30" Length 16678
Size: 60" Length 16679
16. Quartz Sleeves - Open End
Size: 30" length 3184
Size: 60" length 3198
17. Lamp Socket - 30" Lead Wires 16184
Lamp Socket - 90" Lead Wires 16184-1
18. Socket Lok™ Assembly Kit 13899
19. Compression Nut, CPVC 12422
20. Compression Nut, 316L SS 16898
21. Compression Nut Spring 12423
22. Compression Nut Spring End 12421
23. Compression Nut Cap, Fixed 12420
24. Compression Nut Tool 3105

SINGLE-ENDED UNITS

25. UV Lamps SE Standard 254-Mauve
Disinfection and Ozone Destruction Applications
Size: 30" Length 17491
Size: 60" Length 17998
26. UV Lamps SE Standard 185-Blue
TOC Reduction Applications
Size: 30" Length 18977-3
Size: 60" Length 18977-4



more **Replacement** *Parts List*

single-ended units cont. part number

27. UV Lamps SE Validated 254-Green Disinfection and Ozone Destruction Applications	
Size: 30" Length	18059
Size: 60" Length	18060
28. UV Lamps SE Validated 185-Yellow TOC Reduction Applications	
Size: 30" Length	18977-7
Size: 60" Length	18977-8
29. UV Lamps SE-HE 254-Cyan Disinfection and Ozone Destruction Applications	
Size: 60" Length	18024
30. UV Lamps SE-HE 185-Violet TOC Reduction and Chlorine/Chloramine Destruction Applications	
Size: 60" Length	17820
31. UV Lamps SE-HE Validated 254-Black Disinfection and Ozone Destruction Applications	
Size: 60" Length	18951
32. UV Lamps SE-HE Validated 185-Orange TOC Reduction and Chlorine/Chloramine Destruction Applications	
Size: 60" Length	18953
33. Quartz Sleeve - Open End	
Size: 30" Length	3184
Size: 60" Length	3198
34. Lamp Socket - 30" Lead Wires	40569-3
Lamp Socket - 90" Lead Wires	40569-8
Lamp Socket - 16' Lead Wires	40569-16
35. Ballast, HE, 240 Volt	40328
36. Compression Nut - CPVC	19685
Compression Nut - 316L Stainless Steel	40357
37. Compression Nut Cap, Fixed	17489-1
38. Compression Nut Tool	18517
39. Lamp Socket Cap	17489
40. S-254 Sensor Probe	
CSL (4- to 12-lamp units)	18176-1
CSL-HE (4 and 6-lamp units)	18176-1
CSL-HE (8-, 10- and 12-lamp units)	18176-3
CSL-USD (1- to 12-lamp units)	18176-4

single-ended units cont. part number**HIGH TEMPERATURE (HT) UNITS**

41. Lamp Socket	15596
42. Lamp Socket Assembly for HT unit	13899
43. UV Lamps - High Temperature (HT) Standard 254-Mauve Disinfection and Ozone Destruction Applications	
Size: 30" Length	3089
Size: 60" Length	3099
44. Quartz Sleeve - Open End	
Size: 30" Length	3184
Size: 60" Length	3198
45. Compression Nut Tool	3105
46. T-120 Temperature Control Switch	17803

USD-CSL SERIES UNITS

47. Quartz sleeves, domed end	
Size: 30" Length	19882
Size: 60" Length	16791
48. Teflon Quartz bushing	17737
49. Cylinder O-ring, USD-CSL-4R and 6R	
Silicone	40533
EPDM	40486
Viton	40485
50. Cylinder O-ring, USD-CSL-8R through -24R/60	
Silicone	40534
EPDM	40456
Viton	40496



Note: Some units are factory supplied with stainless steel NPT threaded closure plugs to seal the 1/4" sample ports. Teflon tape is temporarily applied to facilitate this threaded seal.





Aquafine® Corporation

DATE: August 1 2005

TO: All CSL Owners

FROM: Aquafine Engineering

CC:

SUBJECT: Revisions to the Parts List – manufactured after 3/14/03

Effective immediately the following part number revisions apply:

- O-ring – Viton P/N 40413
- UV lamps DE Standard 254-Mauve
Disinfection and Ozone Destruction Applications
Size 30” Length.....P/N 3084LM
Size 60” Length.....P/N 3098LM
- UV Lamps SE Standard 185-Blue
TOC Reduction Applications
Size 30” Length.....P/N 18063
Size 60” Length.....P/N 17498
- UV Lamps SE Validated 185-Yellow
TOC Reduction Applications
Size 30” Length.....P/N 18062
Size 60” Length.....P/N 18061
- Lamp Socket-30” Lead Wires..... P/N 40569-3
- Lamp Socket-90” Lead Wires..... P/N 40569-8
- Lamp Socket-16’ Lead Wires..... P/N 40569-16
- Ballast, HE, 240 Volt.....P/N 41634-1
- Cylinder O-ring, USD-CSL-4R through 6R
Silicone.....P/N 40533
EPDM.....P/N 40486
Viton.....P/N 40485
- Cylinder O-ring, USD-CSL 8R through 24R/60
Silicone.....P/N 40534
EPDM.....P/N 40456
Viton.....P/N 40496
- Compression Nut – CPVC, for SE units.....P/N 19685
- Compression Nut, 316L SS units.....P/N 40357
- Quartz Sleeves – Open Ended
Size 30” Length.....P/N 3184
Size 60” Length.....P/N 3198

USD-CSL Series Units:

- Quartz Sleeves – Domed End
Size 30” Length.....P/N 19882
Size 60” Length.....P/N 16791
- Teflon Quartz Bushing.....P/N 19737

*“We are Committed To Serving Our Customers, Our Colleagues,
Our Company And Our Community”*



Our Mission

To strategically supply environmentally safe products through manufacturing and marketing of ultraviolet equipment, world-class in quality, technology, delivery and cost -- with maximum value to our customers while enhancing the safety and development of our employees.

We are committed to serving our customers, our colleagues, our company and our community.

Our Vision

To be the dominant most respected supplier of Ultraviolet treatment technology, in every market niche in which we serve and compete.



H I G H P E R F O R M A N C E U L T R A V I O L E T S Y S T E M S